

AN_BLF6G10_260PRN

BLF6G10_260PRN LDMOS Transistor Model

Rev. 01sm — 18-12-2008

Application note

Document information

| Info | Content |
|-----------------|---|
| Keywords | BLF6G10_260PRN, BLF6G10_260PRN _ LDMOS, model |
| Abstract | This document describes the BLF6G10_260PRN LDMOS transistor model including its installation. |

Revision history

| Rev | D | Description |
|-----|----------|------------------|
| 01 | 20071025 | Initial revision |

Contact information

For additional information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: salesaddresses@nxp.com

Table of contents

1. Introduction..... 4

2. Model Description 4

3. Model Parameters..... 5

4. Parameter extraction procedure 6

5. Installation Instructions 7

5.1 Case 1: No RFLDMOS model library installed..... 7

5.2 Case 2: Old version of the RFLDMOS model library installed 7

5.3 Case 3: Updated version of the RFLDMOS model library installed ... 7

6. Legal Information 9

6.1 Definitions..... 9

6.2 Disclaimers 9


6.3 Patents 9

6.4 Trademarks 9

1. Introduction

The purpose of this document is to provide the customer with a comprehensive description of the BLF6G10_260PRN LDMOS transistor model, extraction procedure and installation procedure.

The BLF6G10_260PRN is a 260 W RF power transistor (see [Fig 1](#)). The device has been optimized for applications in the 800—1000 MHz frequency band. For more information about the device performance, see the Data Sheet.

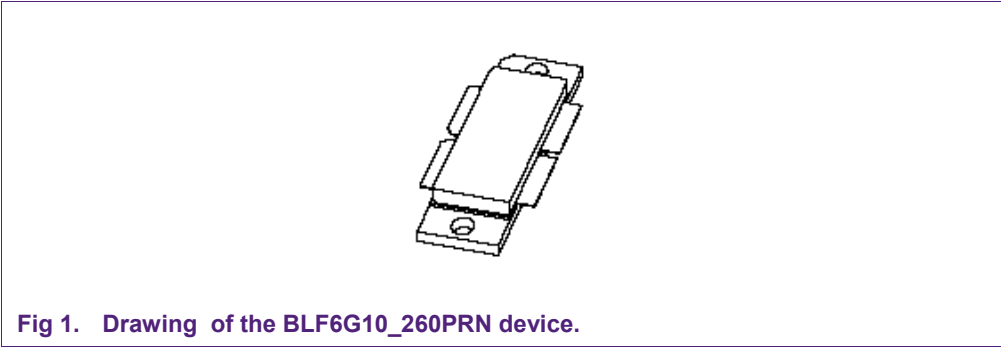

2. Model Description

[Table 1](#) summarizes the model information.

Table 1. Summary of model information

| | |
|-----------------|----------------------|
| | |
| Device name | BLF6G10_260PRN |
| Model name | NXP_ BLF6G10_260PRN |
| Model version | 0.1smt |
| Simulator | ADS 2005A, ADS 2006A |
| Library version | RFLDMOS 10.0 |

The electrical behavior of the transistor die is described by a scalable, physics based, fully electro-thermal RFLDMOS model¹. The model scales with the number of cells, the length of the gate fingers and with the finger-to-finger pitch. The interconnecting structures on the die are modeled by the means of EM simulations and lumped.

1. See: M.B. Willemsen*, R. van Langevelde** and D.B.M. Klaassen, “*High-Voltage LDMOS Compact Modelling*”, NIST-Nanotech 2006, Vol. 3 2006, pgg. 714 – 719.

Equivalent circuits. Lumped elements and bondwire component models are used to model the various package elements².

3. Model Parameters

The ADS symbol for the BLF6G10_260RN device is shown in Fig 2.

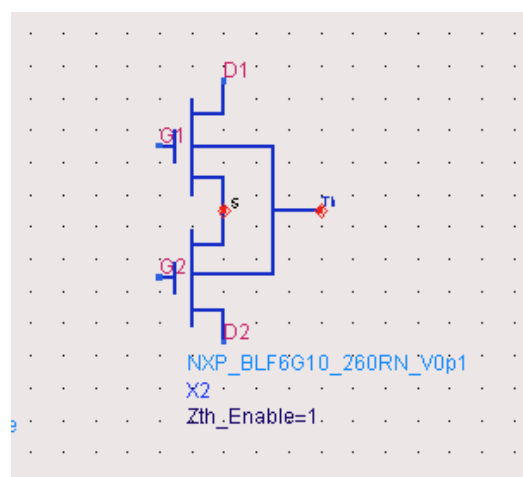


Fig 2. ADS symbol of the BLF6G10_260PRN device model.

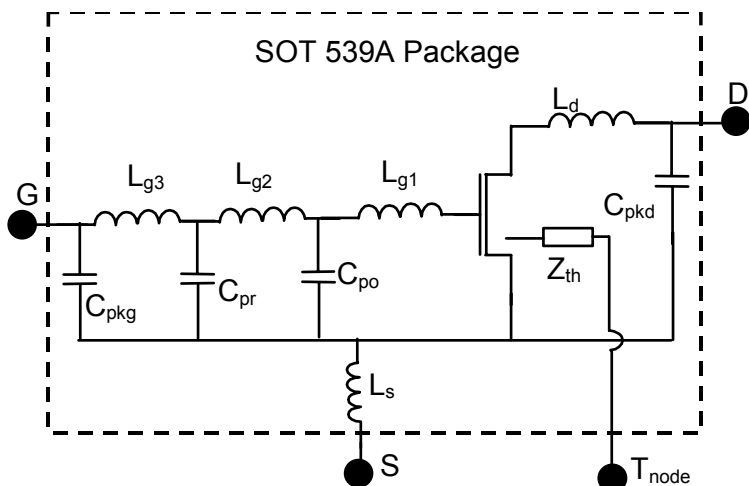


Fig 3. Schematic of half section of the package model.

The simulation temperature is controlled by the “Tamb” temperature parameter of the ADS “Option” block.

The “Th” node is thermal node of the device and must be connected to the ground either directly or through a RC-parallel network which may be used to describe an additional or alternative external thermal network³.

The “Zth_Enable” parameter allows enabling or disabling the default thermal network of the device. This parameter can be used in combination with an external thermal network to reproduce the following situations:

1. Zth_Enable set to 0, Th node connected to ground directly: Isothermal simulations.
2. Zth_Enable set to 0, Th node connected to ground through a RC-parallel network: ET simulations with the external RC-parallel as thermal network.
3. Zth_Enable set to 1, Th node connected to ground directly: ET simulations with the default device thermal network.

2. These components might not be suitable to support time-domain simulations such as transient simulations or transient-assisted HB simulations. Please contact NXP Semiconductors if this constitutes a problem.
3. Failing to connect the “Th” node to the ground either directly or through a RC-parallel network will cause the non-convergence of simulations.

4. Zth_Enable set to 1, Th node connected to ground through a RC-parallel network: ET simulations with the series of the external RC-parallel and the device default as thermal network.

The parameter Cpr_Spread, allow controlling the spread of the values of the bond-wire inductances and matching capacitances. In practice, the parameters set the ratio between the actual and nominal values of each element⁴. By default, these parameters are set to 1.

The expected statistical distributions of the spreading of the bond-wire inductances and matching capacitances are available and can be provided by NXP on special request

4. Parameter extraction procedure

The model parameters of each section were extracted with the following procedure:

- i. Extraction of the parameters of the active die model
 - a. The DC characteristics were measured in wide bias and temperature ranges (V_{gs} up to 15V, V_{ds} up to 30V, T up to 125 °C).
 - b. The s-parameter were measured in a wide frequency band
 - c. Dedicated structures were used for the de-embedding of the parasitics due to metal structures and interconnects from the s-parameter data.
 - d. A semi-automated procedure implemented with the Agilent's IC-CAP program was used to extract the model parameters
- ii. Extraction of the parameters of the package model
 - a. The values of the matching capacitances are obtained from design information
 - b. The value of the package parasitic capacitance is measured with a low-frequency CV meter
 - c. The starting values of the bondwire models are obtained from design information.

5. For instance, by setting L_{g1_spread} to 0.95, the actual value of the L_{g1} inductance becomes 95% its nominal value.

5. Installation Instructions

In order to run properly, the Design Kit requires the latest version of the NXP RFLDMOS model library to be installed (see [Table 1](#) for version information). The RFLDMOS model library provides the definitions of the primitive submodels employed by the main device model. The installation procedure is described for three possible cases.

5.1 Case 1: No RFLDMOS model library installed

- i. Close all ADS schematics
- ii. In the main window of ADS, select "Design Kit -----> Install Design Kits....."
- iii. Install the NXP RFLDMOS model library
- iv. Exit and restart ADS
- v. In the main window of ADS, select "Design Kit -----> Install Design Kits....."
- vi. Install the model Design Kit
- vii. Exit and restart ADS
- viii. Now the model will function properly

5.2 Case 2: Old version of the RFLDMOS model library installed

- i. Close all schematics
- ii. In the main window of ADS, select "Design Kit -----> Setup Design Kits....."
- iii. REMOVE the older version of the RFLDMOS model library (NOT just DISABLE)
- iv. Apply the changes
- v. Exit and restart ADS
- vi. In the main window of ADS, select "Design Kit -----> Install Design Kits....."
- vii. Install the RFLDMOS model library
- viii. Exit and restart ADS
- ix. In the main window of ADS, select "Design Kit -----> Install Design Kits....."
- x. Install the model Design Kit
- xi. Exit and restart ADS
- xii. Now the model will function properly

5.3 Case 3: Updated version of the RFLDMOS model library installed

- i. Close all schematics
- ii. In the main window of ADS, select "Design Kit -----> Install Design Kits....."
- iii. Install the Design Kit of the model
- iv. Exit and restart ADS
- v. Now the model will function properly

NOTE: failing to have the proper version of the RFLDMOS model library installed will result in an error message during the simulations.

The properties of the layers and the values of the components are listed in the table below.



6. Legal Information

6.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

6.2 Disclaimers

General — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of a NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental

damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is for the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

6.3 Patents

Notice is herewith given that the subject device uses one or more patents and that each of these patents may have corresponding patents in several jurisdictions.

6.4 Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

ADS — is a trademark of Agilent Technologies

Momentum — is a trademark of Agilent Technologies

IC-CAP — is a trademark of Agilent Technologies

founded by

PHILIPS

© NXP B.V. 2007

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Date of release: 18-12-2008

Document order number:

Published in The Netherlands